

the Lamps Are Wired Up; The Electric Starting System; The Electric Motor; The Electric Starter; How the Drive Is Made; How the Drive Works.

X. WHAT YOU CAN FIX ON YOUR CAR . 151

WHEN YOUR CAR STOPS ON THE ROAD

Finding the Trouble; The Things You Ought to Carry; How to Repair a Tire While You Wait; Fixing the Radiator; Leaks in the Gasoline Pipe; When the Water Pump Leaks; Putting on a New Fan Belt; Fixing Spark Plug Troubles; To Loosen Screws and Nuts; How to Make Nuts Hold Tight; When the Clutch Acts Up; What Not to Do.

WHEN YOUR CAR IS IN THE GARAGE

When the Valves Need Grinding; Stretching and Replacing Valve Springs; To Remove Carbon from the Cylinders; Putting in New Piston Rings; How to Adjust the Brakes; How to Make Good Gaskets; Replacing Broken Parts.

XI. WHEN YOU NEED A MACHINIST . 165

When You Have a Breakdown on the Road; After Your Car Is in the Shop; Work on the Front Axle; Straightening the Frame; Repairing the Radiator; Timing the Valves; Adjusting the Connecting Rod Bearings; Adjusting the Crank Shaft Bearings; Regrinding and Reboring Cylinders; Rebrazing Loose Parts; Welding Broken Parts; Putting New Leather on the Clutch; Fixing the Steering Gear; Taking Care of the Universal Joints; About the