


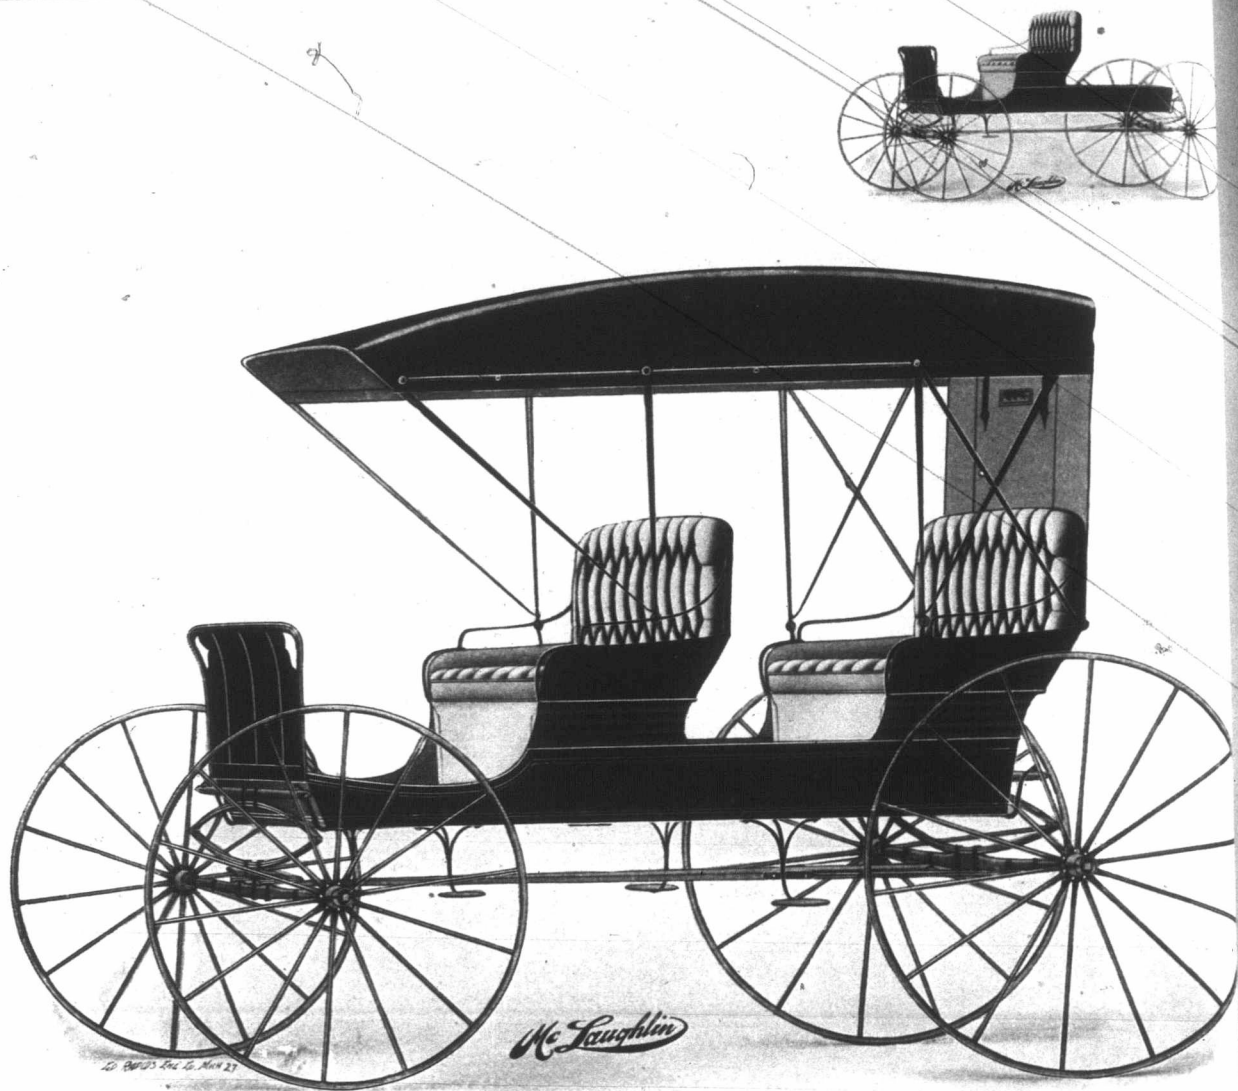

No. 407. Farmers' Surrey, with Extension Top.

Wheels—1½ inch, "A" Standard, Sarven Patent, with sand bands and dust caps.

Gear—Double reach, full wrought connections front and back; graded English cast steel springs; 1½ inch double collar steel axles; patent rubber and brass washers.

Painting—Body and gear dark, appropriately striped.

Trimming—Leather; spring backs and spring cushions; wide roomy seats; two rubber aprons; rubber mat; plated dash rail.

Note—Makes a handy business wagon when rear seat and top are taken off.

Telegraph Code: Dandy.

Roues—1½ pouces, "A" Standard, Sarven Patent, avec bandes à sable et garde-poussière (dust caps).

Train—Deux perches; connections forgées à l'avant et à l'arrière; ressorts en acier anglais (cast steel); essieux à doubles collets en acier. Rondelles patentées, cuivre et caoutchouc.

Peinture—Boîte et train foncés, rayé au gout.

Garnitures—Cuir; dossiers et oreillers à ressorts; sièges larges et confortables; deux tabliers en caoutchouc; natte en caoutchouc; broche du garde-crotte (dash) plaquée sur cuivre.

Note—Une voiture d'affaires très commode en en levant la couverture (top) et le siège de l'arrière.

Code Telegraphique: Dandy.