


required and the distance between them is determined, lay off on a stave the exact location of the doors. Make saw-cuts half-way through to provide for the entrance of the saw when cutting out the doors after the staves are set up. The cuts should be made at an angle of 45 degrees on the edge of the stave, but horizontal on the front. To prevent this stave from breaking while it is being handled, nail a slot on one side of it.

SETTING UP THE SHED.

Figure 14 shows a method of erecting scaffolding from which to adjust and nail the staves. Four posts 6 by 6 inches, the desired height and

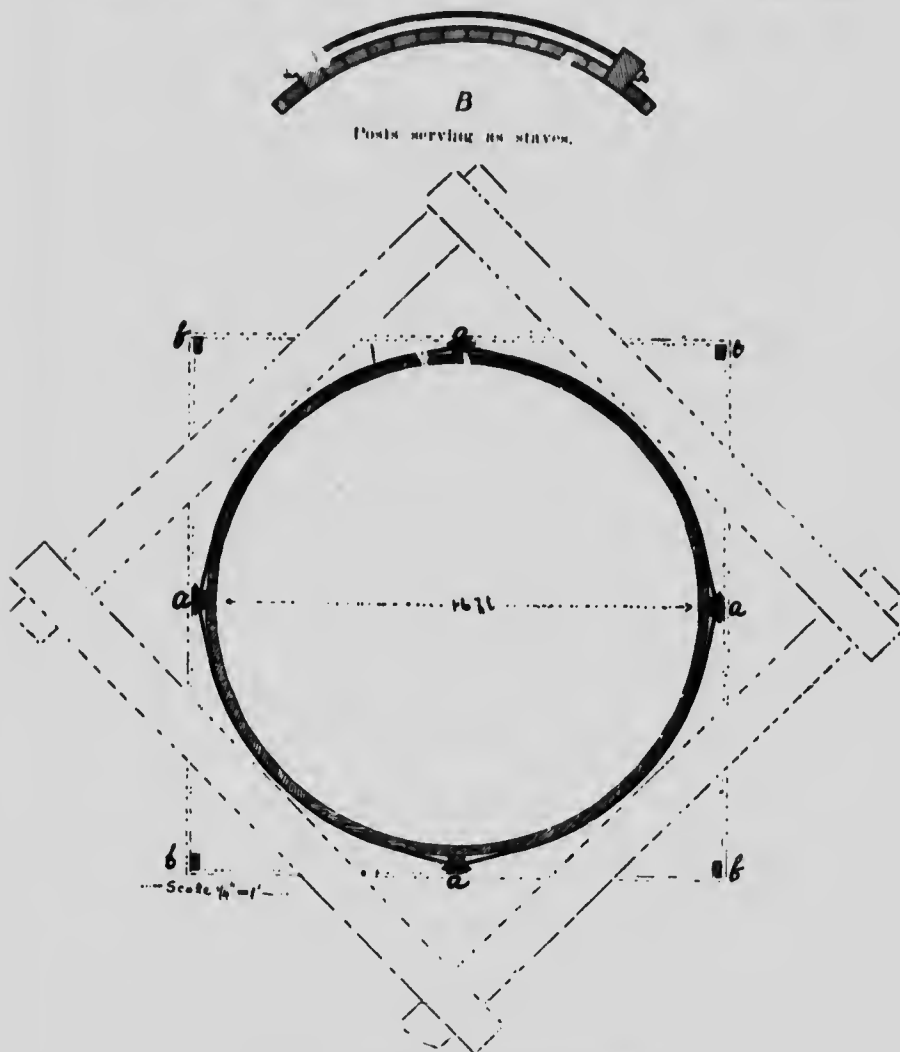

(Fig. 14.) Method of erecting scaffolding.