


The Insley Method of Concrete Distribution

Is used on buildings with comparatively few hundred yards of concrete, and by the largest

contractors on the most important work undertaken.

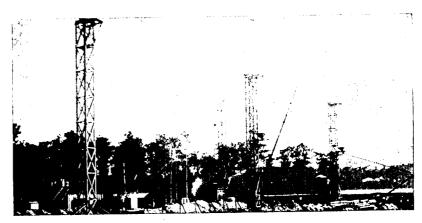

Inslev Spouting System.


 $\mathbf{W} \mathbf{H} \mathbf{Y}$?

Primarily, because it is more economical in ultimate costs, than any other method of

placing concrete. It also insures a high grade of work. The initial set takes place in the forms, not in the transport. Freedom of tracks and runways.

Send for particulars and catalogue.



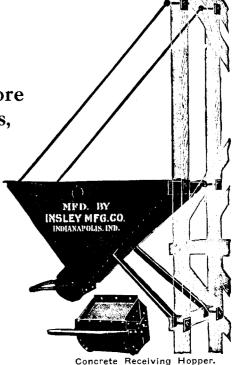

MUSSENS LIMITED

MONTREAL

TORONTO

COBALT

WINNIPEG CALGARY VANCOUVER

318 St. James Street

155 W. Richmond St. Opp. Right-of-Way Mine 259-261 Stanley St. 10th Ave. & 3rd St. E.

365 Water St.

QUEBEC

31 St. Louis St.

ST. JOHN, N.B.

57 Smythe St.

HALIFAX.

78 Granville St.