


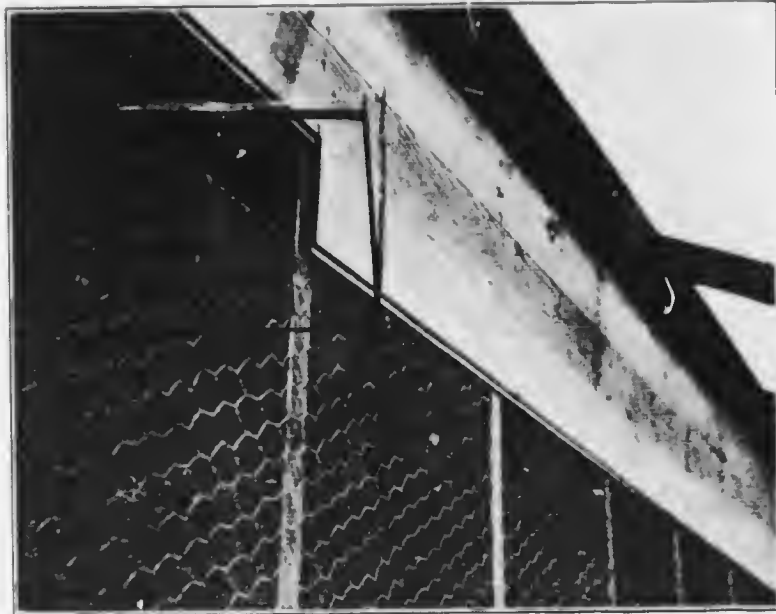

When building, nail on wire, then lay last board over same to hold in place.



A 12-inch board (1 x 12 inches) at the top of the opening would be of service to keep the temperature more even inside.