


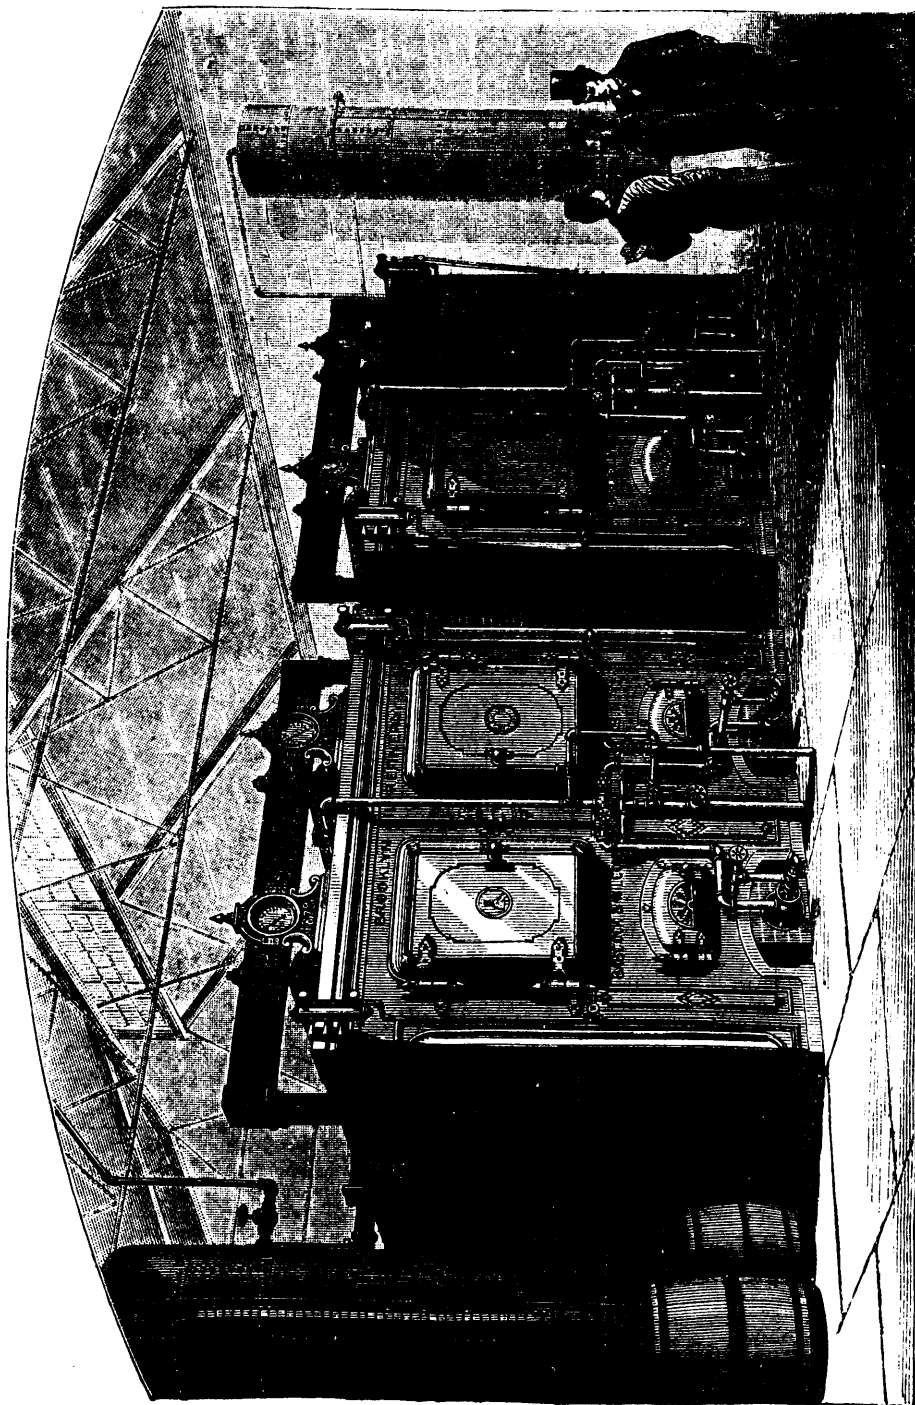

METHOD OF BURNING PETROLEUM, REFUSE, TAR, ETC., AS USED WITH THE BABCOCK & WILCOX BOILERS
AT THE STANDARD OIL CO.'S WORKS, BROOKLYN, E. D.