



continue these operations as long as possible. No pressure is required, nor is any cover absolutely necessary on the surface of the sludge. A layer of partially digested sludge 2 or 3 inches thick soon forms, and, being impervious to the air, it protects the rest. Some cover the surface with cloth which they wet, and others further sow oats on this layer. These methods effect a small saving of sludge.

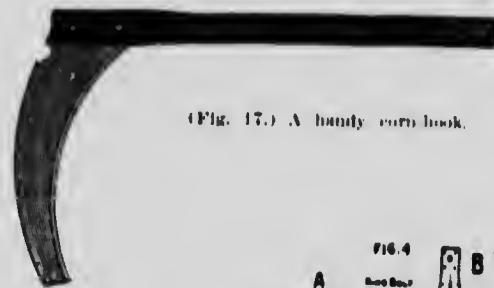


(Fig. 17.) A handy corn hook.

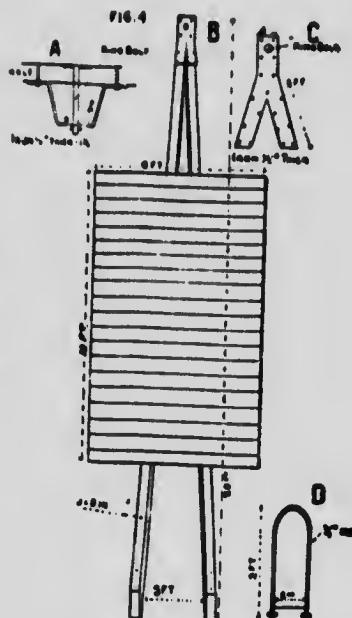

#### THE DETAIL CONSTRUCTION OF THE PLATFORM.

- (a.) Shows front axle and king bolt.
  - (b.) Shows front end of platform which is attached to the underside of the front axle.
  - (c.) Shows an iron which strengthens the splining of the 3 by 8 inch timber where they are attached to front axle.
  - (d.) Shows an iron loop which goes over the hind axle and through the 3 by 8 inch timber. This iron loop attaches platform to hind axle of the wagon.
- It is well to take wagon to blacksmith shop to have this work done, for not all wagons are the same size.

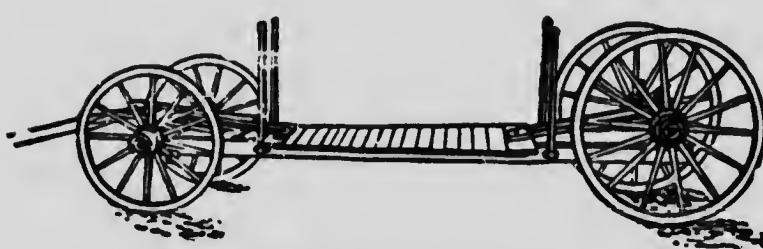

Low platform wagon for hauling corn.